


M9000-700


Universal Ball Valve Linkage Installation Instructions May 2018

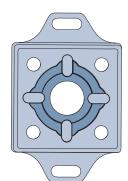






x1

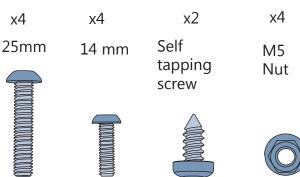

Tools required: T25 Torx driver, T20 Torx driver and 8mm adjustable wrench.

Compatible with VA9104, VA9203, VA9308 and VA9310 Series actuators. For VA9208 series actuators, use field furnished #10-24 x 3 1/2" screws and two locking nuts #10-24.


Honeywell/Siemens/Griswold

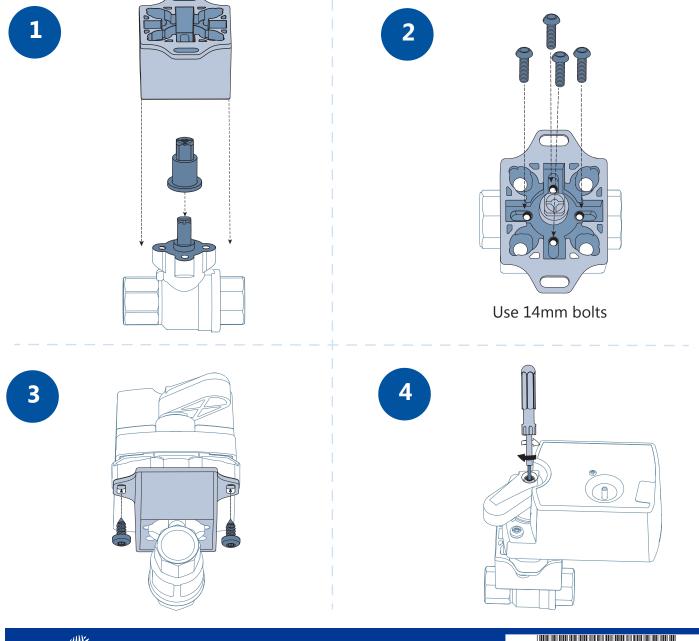



M9000-700

Universal Ball Valve Linkage Installation Instructions April 2018

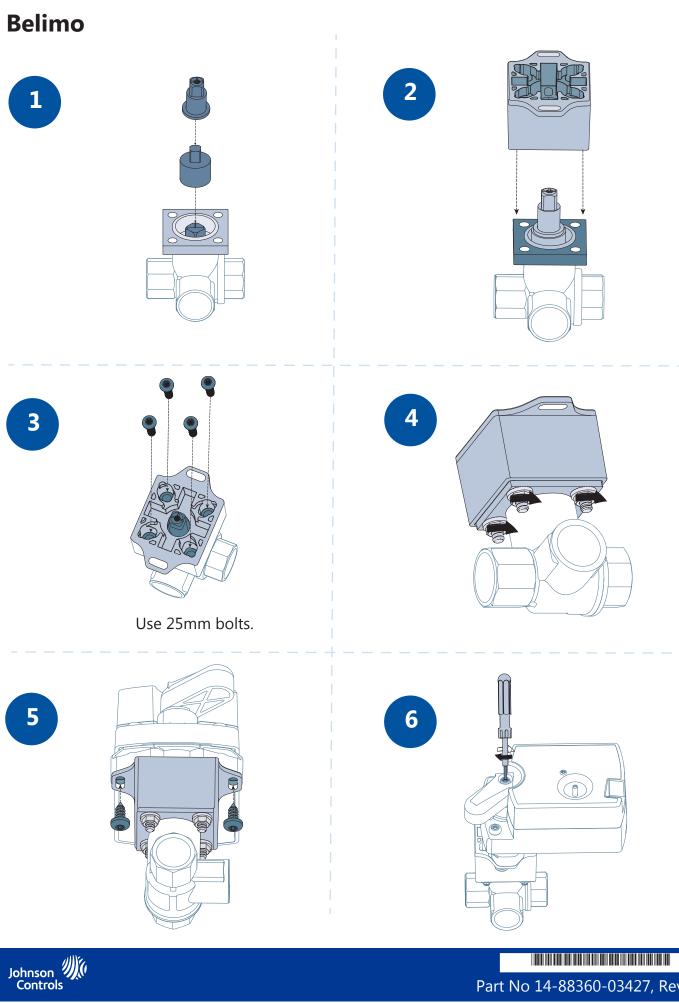

Part No 14-88360-03427, Rev. A